



Russell Hobbs

3 PIECE PAN SET INSTRUCTION MANUAL

Before First Use

Hand-wash thoroughly.

To precondition the non-stick surface, wipe the inside of the cookware with vegetable oil, heat gently, cool thoroughly and wipe clean with a soft cloth.

Using the Cookware



Suitable for use on gas, electric solid hot plates, halogen, and radiant ring hobs.

Not suitable for use on an induction hobs, in a domestic or microwave oven, for deep fat frying, under a grill, on an open fire or barbecue.

To avoid scorching the soft-touch coating on the handles, do not place cookware on hob rings larger than the base size or allow flames to overlap the sides.

Use only heat-resistant plastic, silicone or wooden utensils; do not use metal ones.

Do not cut food in the cookware, as this will damage the surface.

Do not overheat empty cookware.

Do not use the cookware over a high heat, as the non-stick coating is only suitable for use with medium heat settings.

Never leave the cookware unattended whilst in use and ensure that the kitchen is well-ventilated.

To increase the longevity of the cookware, it is recommended to use a small amount of oil or fat. Certain foods such as eggs may require a small amount of oil.


Ceramic hobs can be scratched when moving the cookware. To minimise damage, lift and place the cookware rather than drag it across the hob surface.

Any screws present on cookware may loosen over time. Using a screwdriver, retighten the screws as necessary. Be cautious with screws on glass lids, as overtightening may result in the lid being damaged.

Cleaning the Cookware

Allow to cool thoroughly before moving or cleaning.

This cookware is not dishwasher safe.



Clean the cookware in warm, soapy water with a mild detergent and a soft cloth; do not use harsh or abrasive cleaners or scourers; rinse and dry thoroughly.

To remove stubborn stains, use a nonabrasive plastic mesh or pad with warm, soapy water. Do not leave the cookware to soak in water for long periods of time.

Storage

Do not store wet cookware; store in a clean, dry place. If stacking the cookware, place a layer of paper in-between to avoid scratching or damage.

Caution

Do not allow the handles to overlap adjacent hob rings or the edge of the hob.

The handles of the cookware may become hot during use; always use heat-resistant oven gloves to move it. Do not allow the cookware to boil dry, as this can cause warping.

Never expose hot cookware to cold water or other liquid.

If the cookware becomes overheated, allow it to cool to room temperature before removing from the hob.

Examine the condition and safety of the cookware before using again; if there is any evidence of damage, dispose of it carefully.

Dimensions stated are approximate internal measurements taken rim to rim.

Not suitable for deep fat frying.

Please retain this information for future reference.

Supplied by: UP Global Sourcing UK Ltd., **UK**, Manchester OL9 0DD. **Germany**, 51149 Köln, under licence from Spectrum Brands (UK) Limited.

Russell Hobbs is the registered trademark of Spectrum Brands (UK) Limited.

PO number: PO060819

Product code: RH01154DL

www.russellhobbs.com

Made in China.

CD121119/MD000000/V1

