

Stir & Pop

Popcorn Maker

**giles &
posner®**

INSTRUCTION MANUAL

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not overload the appliance.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use the appliance if it has been dropped or if there are visible signs of damage.

Do not use the appliance for anything other than its intended use. Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

Care and Maintenance

Switch off and unplug the Popcorn Maker from the mains power supply and allow to cool fully before performing any cleaning or user maintenance.

Wash the popcorn maker lid and cap in warm, soapy water, then rinse and dry thoroughly.

Wipe the Popcorn Maker main unit with a soft, damp cloth and allow to dry thoroughly.

Never immerse the Popcorn Maker in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the Popcorn Maker, as this could cause damage.

The Popcorn Maker is not suitable for use in a dishwasher.

Always clean the Popcorn Maker immediately after each use.



1. Popcorn Maker main unit
2. Serving bowl lid
3. Serving bowl lid cap
4. Cool-touch handles

5. On/Off switch
6. Non-stick coated heating plate
7. Motorised rotating rod
8. Non-slip rubber feet

Instructions for Use

Before First Use

Before using the Popcorn Maker for the first time, wipe it down with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Popcorn Maker in water or any other liquid.

Note: When using the Popcorn Maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Popcorn Maker.

Using the Popcorn Maker

STEP 1: Place the Popcorn Maker main unit onto a flat, stable surface, at a height that is comfortable for the user. Add around 30 ml of vegetable oil to the non-stick coated heating plate.

STEP 2: Evenly distribute up to 130 g of popcorn kernels on the non-stick coated heating plate. Do not use more than 130 g of popcorn kernels, as this will overfill the Popcorn Maker and could result in damage.

STEP 3: Place the serving bowl lid onto the Popcorn Maker main unit to prevent losing any popcorn as it cooks. The handles on the lid should be aligned with the handles on the Popcorn Maker main unit.

STEP 4: Plug in and switch on the Popcorn Maker at the mains power supply. Turn on the Popcorn Maker using the on/off switch.

The motorised rotating rod will activate and initiate the stir function.

It will take approx. 6 minutes for all of the popcorn kernels to pop, dependent on the number of kernels used.

STEP 5: When all of the popcorn is made, turn off the Popcorn Maker using the on/off switch and switch off and unplug from the mains power supply.

STEP 6: Position the serving bowl lid cap onto the serving bowl lid.

Hold the Popcorn Maker by the handles and flip 180 °, then place it back down onto a flat, stable surface.

Lift the Popcorn Maker main unit up and away from the serving bowl lid; the lid can now be used as a serving bowl.

Allow the Popcorn Maker to cool for approx. 10–12 minutes before using it again.

Warning: Some popcorn kernels may not expand or puff properly during operation.

Exercise caution and avoid immediate contact with the popcorn kernels, as they will be very hot.

Do not remove the serving bowl lid whilst the unit is turned on and in operation.

Do not shake the Popcorn Maker whilst it is in operation.

Storage

Check that the Popcorn Maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the power supply cord tightly around the Popcorn Maker; wrap it loosely to avoid causing damage.

Specifications

Product Code: EK4572G

Input: 220–240 V/50–60 Hz

Output: 850 W

Recipe

* Any recipe images used in this instruction manual are intended for illustrative purposes only.



Popcorn Recipe

Ingredients

130 g popcorn kernels
30 ml vegetable oil

Method

Place the Popcorn Maker main unit onto a flat, stable surface, at a height that is comfortable for the user. Pour up to 30 ml of vegetable oil on the non-stick coated heating plate.

Evenly distribute up to 130 g of popcorn kernels on the non-stick coated heating plate. Do not use more than 130 g of popcorn kernels as this will overfill the Popcorn Maker and could result in damage.

Place the serving bowl lid onto the Popcorn Maker main unit; check that the cool-touch handles on the lid are aligned with the cool-touch handles on the main unit.

Plug in and switch on the Popcorn Maker at the mains power supply. Turn on the Popcorn Maker using the on/off switch.

It will take approx. 6 minutes for all of the popcorn kernels to pop, dependent on the amount of kernels used.

When all of the popcorn is popped, turn off the Popcorn Maker using the on/off switch and switch off and unplug it from the mains power supply.

Position the serving bowl lid cap onto the serving bowl lid.

Hold the Popcorn Maker by the handles and flip 180 °, then place it back down onto a flat, stable surface.

Lift the Popcorn Maker main unit up and away from the serving bowl lid; the lid can now be used as a serving bowl.

Topping Ideas

- Drizzled peanut butter
- Drizzled chocolate sauce
- Cinnamon and sugar
- Chocolate pieces
- Sugar and salt
- Drizzled yoghurt
- Pretzel pieces
- Salted caramel sauce

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

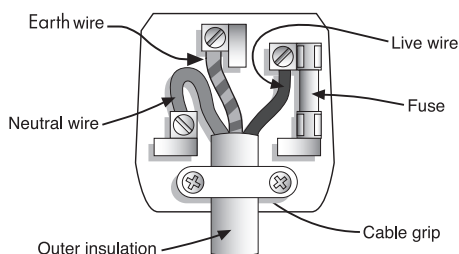

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.gilesandposner.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Giles and Posner will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Manufactured by:
UP Global Sourcing UK Ltd.,
UK, Manchester OL9 0DD,
Germany, 51149 Köln.

Made in China.

CD010721/MD000000/V1