

AMERICAN
originals

SNOW CONE MAKER

MAKE DELICIOUS ICE TREATS IN MINUTES



NOW SHOWING
**THE ABOMINABLE
SNOW CONE**

INSTRUCTION MANUAL

Make delish snow cones in minutes with this super speedy, seriously cool Snow Cone Maker – yuuuummy! Remember though, read all of the instructions carefully and keep them for future reference.

SAFE & SOUND

When you're using the Snow Cone Maker you gotta keep safe and sound, so make sure that when you use electrical gadgets you always stick to these basic safety precautions.

SAFETY INFO

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they don't play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

The logo features the word "AMERICAN" in a large, bold, serif font, with "originals" in a smaller, lowercase, script font below it. The text is enclosed in a dark oval with a metallic border. The background of the page is decorated with a row of white stars on a dark grey banner at the bottom.

AMERICAN
originals

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Don't touch any moving parts on this appliance during use, as this could cause injury.

Don't immerse the appliance in water or any other liquid.

Don't operate the appliance with wet hands.

Don't use broken or loose cutting or rotating blades.

Don't overload the appliance; only fill up to the maximum level marked on the appliance as the mixture level may rise during use.

Don't leave the appliance unattended whilst connected to the mains power supply.

Don't remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Don't use the appliance for anything other than its intended use.

Don't use any accessories other than those supplied.

Don't use this appliance outdoors.

Don't store the appliance in direct sunlight or in high humidity conditions.

Don't move the appliance whilst it is in use.

Don't place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Don't touch sharp blades.

The logo features the word "AMERICAN" in a large, bold, sans-serif font, with the word "originals" in a smaller, lowercase, script font directly beneath it. The text is centered within a dark, horizontally-oriented oval that has a metallic, beveled border. The entire logo is set against a background of a dark grey banner with a white wavy line above it and several white five-pointed stars scattered along the banner.

AMERICAN
originals

LET'S BEGIN

Remove your Snow Cone Maker from the box.

Remove any packaging from the Snow Cone Maker.

Place the packaging inside the box and either store or dispose of safely.

LET'S SEE WATCHA GOT

Snow Cone Maker base unit

Snow Cone Maker power unit

Ice shaving chamber

Lid

20 paper cones

Instruction manual

COOL CHARACTERISTICS

Creates delicious snow cones from regular ice cubes

85 W power


Stainless steel blade

20 paper cones for serving

The logo features the word "AMERICAN" in a bold, sans-serif font, with "originals" in a script font below it. The logo is set within a dark oval with a metallic border. The background of the page features a decorative border of white stars on a dark grey background.

AMERICAN
originals

ALL OF THE BITS

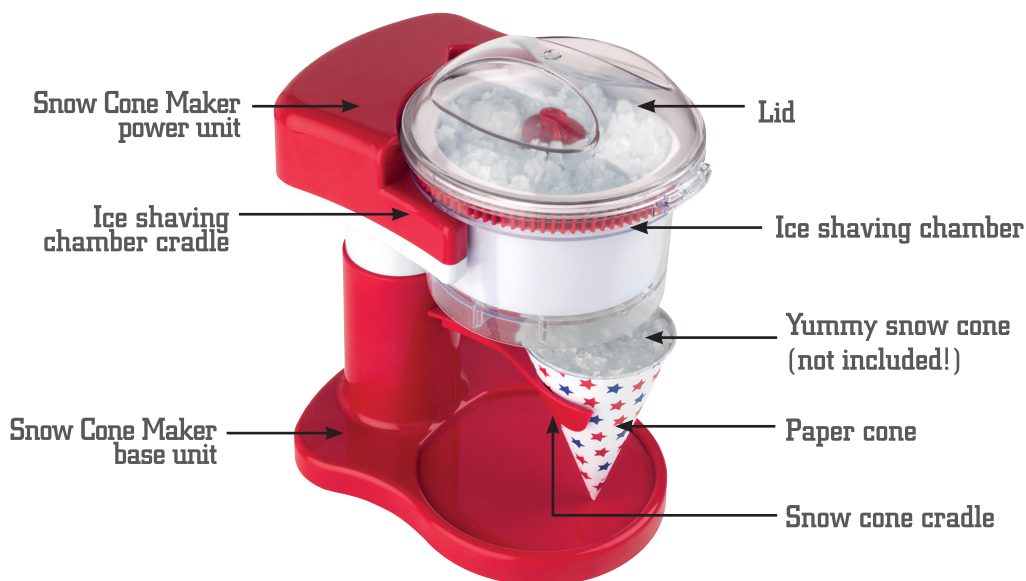

GET READY...

IT'S PARTY TIME!

Before using your seriously cool Snow Cone Maker for the first time, you should wipe it down with a soft, damp cloth and let it dry thoroughly. Make sure that you clean all of the bits too!

Remember, don't immerse your Snow Cone Maker in water or any other liquid!

Note: When using your Snow Cone Maker for the first time, it may emit a slight odour. This is nothing to worry about and will soon go away, as long as you make sure that your Snow Cone Maker is getting enough ventilation.

AMERICAN
originals

GET SET...

ASSEMBLING YOUR SERIOUSLY COOL SNOW CONE MAKER

Carefully pull your Snow Cone Maker base unit and power unit away from each other to separate them.

Position your Snow Cone Maker base unit on a stable, heat-resistant surface at a height that is comfortable for you to let it go and let it snow.

Insert the Snow Cone Maker power unit into the slot at the top of the Snow Cone Maker base unit, and then carefully push it down until the two sections are joined together.

Attach the ice shaving chamber by lowering it into the ice shaving chamber cradle, making sure that you press it down gently until it is nice and secure.

GO!

MAKING DELISH SNOW CONES

Fill the ice shaving chamber with fully frozen ice cubes, making sure that you don't go past the Max. fill mark as things could get messy and your seriously cool Snow Cone Maker could get damaged!

Place a paper cone into the snow cone cradle.

Plug in and switch on your Snow Cone Maker at the mains power supply.

Lock the lid into position by placing it onto the ice shaving chamber and then twisting it in an anticlockwise direction; this will set your Snow Cone Maker in motion.

It's snow time! Let your Snow Cone Maker do its thaaaaaang until your delish snow cones are ready to go!

Once your paper cone is brimming with snow, twist the lid in a clockwise direction to stop the Snow Cone Maker. Switch your full paper cone for an empty one and then restart your seriously cool Snow Cone Maker. Repeat until you've got the required number of snow cones or until the ice runs out.

Add your fave juice or drink for a truly super flavoursome snow cone!

Note: Make sure that the lid is securely attached to the ice shaving chamber before use.



AMERICAN
originals

Tip! If you're making more than one snow cone, make sure that you've got plenty of bowls or suitable holders ready for when you switch your full paper cones for empty ones.

Caution: Don't fill the ice shaving chamber past the Max. fill mark, as things could get messy and could damage your seriously cool Snow Cone Maker – boo-hoo!

Warning: Don't try to remove the ice shaving chamber too soon – make sure that the Snow Cone Maker power unit has stopped running and remove the lid first.

Warning: Maximum operation time is 2 minutes. Allow the Snow Cone Maker power unit to cool for 2 minutes before using again.

DISASSEMBLING YOUR SERIOUSLY COOL SNOW CONE MAKER

Twist the lid in a clockwise direction to remove it and stop your Snow Cone Maker. Once the Snow Cone Maker power unit has completely stopped, carefully remove the ice shaving chamber from the ice shaving chamber cradle.

Inside the ice shaving chamber you will find a spinning container which can also be dismantled for cleaning. To do so, remove the central plug by twisting it in an anticlockwise direction and then pull it out; you can now access and remove the spinning container.

Take care when removing the spinning container as it has integrated sharp blades and you could hurt yourself.

When you've cleaned up, reinsert the spinning container into the ice shaving chamber, then replace the central plug and twist it in a clockwise direction to secure it.

To assemble your Snow Cone Maker again, follow the instructions in the section entitled 'Assembling Your Seriously Cool Snow Cone Maker'.

KEEPING YOUR SNOW CONE MAKER IN APPLE PIE ORDER!

Before attempting any cleaning or maintenance, unplug your Snow Cone Maker from the mains power supply.

Clean the Snow Cone Maker power unit with a soft, damp cloth and dry thoroughly. Remember, don't immerse the Snow Cone Maker power unit in water or any other liquid!

The logo features the word "AMERICAN" in a large, bold, sans-serif font, with the word "originals" in a smaller, lowercase, script font directly beneath it. The text is centered within a dark oval that has a metallic, beveled border. The entire logo is set against a background of a dark grey banner with white stars on either side.

AMERICAN
originals

You can wash the Snow Cone Maker base unit, snow cone cradle, lid and ice shaving chamber in warm, soapy water but make sure you dry them properly! Never use harsh or abrasive cleaning detergents or scourers to clean your Snow Cone Mixer as this could cause damage.

Your Snow Cone Mixer should be cleaned after every use to keep it in tiptop condition.

Warning: The ice shaving chamber contains a sharp blade; handle it carefully when cleaning. To access and clean the blade, disassemble the spinning container following the instructions in the section entitled 'Disassembling Your Seriously Cool Snow Cone Maker' and then carefully clean the blade with a brush.

STORING YOUR SNOW CONE MAKER AWAY

Before storing, ensure that your Snow Cone Maker is cool, clean and dry. Never store whilst it is wet.

Never wrap the cord tightly around your Snow Cone Maker; wrap it loosely to avoid causing damage.

Store in a cool, dry place.

SPECIFICATION

Product code: EK2100

Input: 220–240 V ~ 50–60 Hz

Output: 85 W

The logo features the word "AMERICAN" in a bold, sans-serif font, with "originals" in a script font below it. The logo is set within a dark oval with a metallic border. The background of the page is decorated with a row of white stars on a dark grey band.

AMERICAN
originals

TROPICAL FRUIT CONES

INGREDIENTS

Ice cubes

2 mangoes, chopped

250 grams pineapple, chopped

1 Lime, juiced

Lime wedges, to garnish

METHOD

Put the chopped mangoes, pineapple and lime juice into a food processor, then blend until liquified.

Fill the ice shaving chamber with fully frozen ice, making sure that you don't go past the Max. fill mark.

Place a paper cone into the snow cone cradle and then switch on your Snow Cone Maker.

Collect the 'snow' in the paper cones.

Once your paper cone is brimming with snow, pour over the prepared tropical juice.

Add a wedge of lime, to garnish.

The logo is an oval with a metallic border. Inside, the word "AMERICAN" is written in a bold, sans-serif font, and the word "originals" is written below it in a smaller, cursive script.

AMERICAN
originals

APPLE AND GRAPE FRUIT CONES

INGREDIENTS

Ice cubes
300 grams caster sugar
350 millilitres water
225 millilitres apple juice or cider
115 millilitres red grape juice
Juice of 1 lime

METHOD

Add the caster sugar and water to a pan and bring it to the boil over a high heat, stirring often until the sugar is dissolved. Pour the liquid into a bowl and allow to cool to room temperature before refrigerating.

Once cool, add the apple, grape and lime juice, then refrigerate once more for approximately 2 hours or until suitably chilled.

Fill the ice shaving chamber with fully frozen ice, making sure that you don't go past the Max. fill mark.

Place a paper cone into the snow cone cradle and then switch on your Snow Cone Maker.

Collect the 'snow' in the paper cones.

Once your paper cone is brimming with snow, pour over the prepared apple and grape syrup.



AMERICAN
originals

BLUEBERRY MOJITO CONES

INGREDIENTS

Ice cubes
50 grams blueberries
50 grams caster sugar
85 millilitres white rum
60 millilitres water
7–8 fresh mint leaves
Juice of 1 lime
Mint sprig, to garnish

METHOD

Add the blueberries, caster sugar, water and mint leaves to a pan and bring it to the boil over a medium heat, stirring continuously to mash the blueberries and bruise the mint leaves. Pour the liquid into a bowl and allow to cool for approximately 10 minutes.

Once cool, strain the syrup to remove the blueberry skins and mint leaves, then add the white rum and lime juice.

Fill the ice shaving chamber with fully frozen ice, making sure that you don't go past the Max. fill mark.

Place a paper cone into the snow cone cradle and then switch on your Snow Cone Maker.

Collect the 'snow' in the paper cones.

Once your paper cone is brimming with snow, pour over the prepared blueberry mojito syrup.

Add a sprig of mint, to garnish.



AMERICAN
originals

PIÑA COLADA CONES

INGREDIENTS

Ice cubes

1 pineapple, peeled, cored and diced

200 grams caster sugar

70 grams shredded coconut

250 millilitres water

125 millilitres unsweetened coconut milk

METHOD

Add the caster sugar and water to a pan and bring it to the boil over a medium heat, stirring often until the sugar is dissolved. Pour the liquid into a bowl and allow to cool to room temperature.

Put the cooled syrup, coconut milk and $\frac{3}{4}$ of the pineapple into a blender, then blend until smooth.

Fill the ice shaving chamber with fully frozen ice, making sure that you don't go past the Max. fill mark.

Place a paper cone into the snow cone cradle and then switch on your Snow Cone Maker.

Collect the 'snow' in the paper cones.

Once your paper cone is brimming with snow, pour over the prepared piña colada syrup.

Add the remaining pineapple, to garnish.

AMERICAN
originals

MOCHA CONES

INGREDIENTS

Ice cubes

400 grams caster sugar

65 grams cocoa powder

250 millilitres water

3 tablespoons instant coffee granules

Shaved chocolate, to garnish

METHOD

Add the caster sugar, cocoa powder, instant coffee granules and water to a pan and bring it to the boil over a medium heat, stirring often until the sugar and coffee are dissolved. Strain the mixture, then pour it into a bowl and refrigerate until suitably chilled.

Fill the ice shaving chamber with fully frozen ice, making sure that you don't go past the Max. fill mark.

Place a paper cone into the snow cone cradle and then switch on your Snow Cone Maker.

Collect the 'snow' in the paper cones.

Once your paper cone is brimming with snow, pour over the prepared mocha syrup.

Add some shaved chocolate, to garnish.



CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT


As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

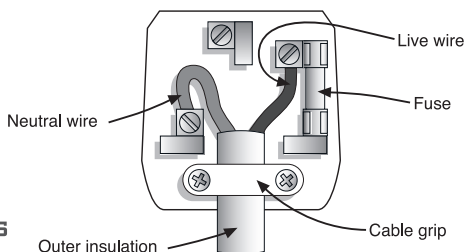

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal \perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse off the same rating already fitted and conforming to BS1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

AMERICAN
originals

UP GLOBAL SOURCING

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition, please contact our Customer Services Department using one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required. If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

AMERICAN
originals



Distributed by
UP Global Sourcing, Victoria Street,
Manchester OL9 0DD. UK.



Made in China
CD250315/MD040615/V6