



THE 2 IN 1 POPCORN AND CRÊPE MAKER

Makes **fresh popcorn and delicious crêpes** in minutes!





Please read all of the instructions carefully and retain for future reference.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.



Do not store the appliance in direct sunlight or in high humidity conditions. Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Do not use sharp or abrasive items with this appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

Warning: Keep the appliance away from flammable materials.

CARE AND MAINTENANCE

Switch off and unplug the 2 in 1 Popcorn and Crêpe Maker from the mains power supply and allow to fully cool before performing any cleaning or user maintenance.

STEP 1: Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the 2 in 1 Popcorn and Crêpe Maker with a soft, damp cloth and allow to dry thoroughly.

Never immerse the 2 in 1 Popcorn and Crêpe Maker in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the 2 in 1 Popcorn and Crêpe Maker, as this could cause damage.

Note: The 2 in 1 Popcorn and Crêpe Maker and accessories are not dishwasher safe.

Always clean the 2 in 1 Popcorn and Crêpe Maker after each use.





GETTING STARTED

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

IN THE BOX

2 in 1 Popcorn and Crêpe Maker

Pop 'n' serve bowl with cap

Measuring cup (2.5 fl. oz)

Oil measure (1 tbsp)

Batter spreader

Instruction manual

FEATURES

Makes delicious popcorn and crêpes
Non-stick, easy-to-clean cooking plates

Includes batter spreader, pop 'n' serve bowl, oil measure and measuring cup

DESCRIPTION OF PARTS



1. 2 in 1 Popcorn and Crêpe Maker
2. Pop 'n' serve bowl
3. Bowl cap
4. Non-stick cooking plate
5. On/off switch

6. Indicator light
7. Measuring cup
8. Oil measure
9. Batter spreader

INSTRUCTIONS FOR USE

BEFORE FIRST USE

STEP 1: Switch off and unplug the 2 in 1 Popcorn and Crêpe Maker from the mains power supply.

STEP 2: Wipe the 2 in 1 Popcorn and Crêpe Maker with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and allow to dry naturally. Do not immerse the 2 in 1 Popcorn and Crêpe Maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the 2 in 1 Popcorn and Crêpe Maker or its accessories, as this could cause damage.

Note: When using the 2 in 1 Popcorn and Crêpe Maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the 2 in 1 Popcorn and Crêpe Maker.

USING THE 2 IN 1 POPCORN AND CRÊPE MAKER

MAKING POPCORN

Check that the 2 in 1 Popcorn and Crêpe Maker is clean, dry and switched off and unplugged from the mains power supply.

STEP 1: Place the 2 in 1 Popcorn and Crêpe Maker onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Using the oil measure provided, measure out one level spoon of oil or butter and apply it to the non-stick cooking plate, rubbing it in carefully with a paper towel.

STEP 3: Plug in and switch on the 2 in 1 Popcorn and Crêpe Maker at the mains power supply.

STEP 4: Turn on the 2 in 1 Popcorn and Crêpe Maker using the on/off switch; the indicator light will illuminate.

STEP 5: Preheat the 2 in 1 Popcorn and Crêpe Maker for approx. 1½–2 minutes. The indicator light will switch off once the required temperature has been reached.

STEP 6: Using the measuring cup provided, measure out 50–60 g popcorn kernels and pour them onto the oiled non-stick cooking plate. Do not use more than 60 g of kernels at a time, as this will overfill the 2 in 1 Popcorn and Crêpe Maker and could result in damage to the appliance or injury to the user.





STEP 7: Align the tab on the pop 'n' serve bowl with the arrow on the 2 in 1 Popcorn and Crêpe Maker and then twist the pop 'n' serve bowl 90 ° in a clockwise direction until it locks into position. Remove the bowl cap to allow any steam to escape.

STEP 8: Use the handle to gently shake the 2 in 1 Popcorn and Crêpe Maker, evenly coating all of the kernels with oil. It will take approx. 5–6 minutes for all of the kernels to pop.

STEP 9: Once cooking is complete, turn off the 2 in 1 Popcorn and Crêpe Maker using the on/off switch and unplug it from the mains power supply. Replace the bowl cap onto the pop 'n' serve bowl.

STEP 10: Holding the 2 in 1 Popcorn and Crêpe Maker by the handle, flip it 180 ° and twist the pop 'n' serve bowl 90 ° in an anticlockwise direction to remove it from the 2 in 1 Popcorn and Crêpe Maker.

STEP 11: The pop 'n' serve bowl can now be used to serve delicious popcorn.

Note: During use the indicator light will cycle on and off to indicate that the 2 in 1 Popcorn and Crêpe Maker is maintaining the optimum temperature.

If popcorn kernels begin to stick to the non-stick heat plate, use the handle to gently shake the 2 in 1 Popcorn and Crêpe Maker. This will help to prevent the popcorn from burning.

Failure to add a sufficient amount of oil may result in burning the kernels and could cause them not to pop.

Warning: Some popcorn kernels may not expand or puff properly during operation. Exercise caution and avoid immediate contact with the popcorn kernels as they will be very hot.

MAKING CRÊPES

Check that the 2 in 1 Popcorn and Crêpe Maker is clean, dry and switched off and unplugged from the mains power supply.

STEP 1: Place the 2 in 1 Popcorn and Crêpe Maker onto a flat, stable surface, at a height that is comfortable for the user.

STEP 2: Plug in and switch on the 2 in 1 Popcorn and Crêpe Maker at the mains power supply.

STEP 3: Turn on the 2 in 1 Popcorn and Crêpe Maker using the on/off switch; the indicator light will illuminate.



STEP 4: Preheat the 2 in 1 Popcorn and Crêpe Maker for approx. 1½–2 minutes. The indicator light will switch off once the required temperature has been reached.

STEP 5: Using the measuring cup provided, measure out one level cup of crêpe batter and pour it onto the non-stick cooking plate. Do not use more than one level cup of batter at a time, as this could hinder the cooking process.

STEP 6: Using the batter spreader, spread the batter in a circular motion until it is evenly distributed across the non-stick cooking plate.

STEP 7: Cook the crêpe for approx. 2 minutes or until the bottom has lightly browned.

STEP 8: When the crêpe starts to bubble, loosen the edges with a spatula, flip the crêpe over and allow to finish cooking.

STEP 9: Once cooking is complete, turn off the 2 in 1 Popcorn and Crêpe Maker using the on/off switch and unplug it from the mains power supply.

STEP 10: Carefully slide the crêpe from the 2 in 1 Popcorn and Crêpe Maker onto a plate.

Note: During use the indicator light will cycle on and off to indicate that the 2 in 1 Popcorn and Crêpe Maker is maintaining an optimum temperature.

STORAGE

Check that the 2 in 1 Popcorn and Crêpe Maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the power supply cord tightly around the 2 in 1 Popcorn and Crêpe Maker; wrap it loosely to avoid causing damage.

SPECIFICATIONS

Product Code: EK2349G

Input: 220–240 V ~ 50/60 Hz

Output: 800 W





CLASSIC SALTED

INGREDIENTS

30 g butter
20 g sugar
1 tbsp water

1 tsp olive oil
Salt, to taste

METHOD

Combine the all of the ingredients in a saucepan and heat gently until the butter has melted.

Leave the mixture to cool, stirring intermittently.

Pour the topping over the popcorn and toss the mixture through.

Serve and enjoy!

CLASSIC SWEET

INGREDIENTS

30 g butter
30 g brown sugar

2 tbsp golden syrup

METHOD

Combine the all of the ingredients in a saucepan and heat gently until the butter has melted.

Leave the mixture to cool, stirring intermittently.

Pour the topping over the popcorn and toss the mixture through.

Serve and enjoy!



CRÊPE RECIPE

INGREDIENTS

100 g plain flour
2 eggs
300 ml milk

1 tbsp vegetable oil, plus extra for frying
Pinch of salt

METHOD

Pour the flour and salt into a large mixing bowl, making a well in the centre.

Crack the eggs into the well, add 50 ml milk and the vegetable oil and then whisk together until the batter is smooth and thick. Whilst whisking the batter, pour in the remaining milk.

Leave the batter in the fridge for approx. 30 minutes to allow the starch to swell.

Cook the crêpes following the instructions in the section entitled 'Making Crêpes'. Pour the topping over the crêpes and coat thoroughly.

SUGGESTED TOPPINGS

Chocolate, golden syrup, ice cream, peanut butter, hazelnuts, almonds, lemon, banana, blueberries, strawberries, raspberries

* Any recipe images used in this instruction manual are intended for illustrative purposes only.

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:
The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK **USE ONLY** - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

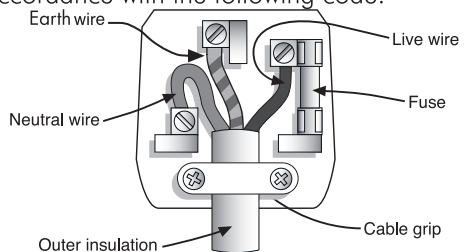

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP GLOBAL SOURCING UK LTD.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Giles & Posner will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.





CONGRATULATIONS ON YOUR PURCHASE!

Go to <http://guarantee.upgs.com/giles-and-posner>
to register your product for a 12 month guarantee.

We combine our passion for food with innovative concepts to create
a high quality range of reliable party and kitchen appliances.

View our rapidly growing ranges at
www.gilesandposner.com



Manufactured by
UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.

CD220617/MD000000/V1

