



BEER TAP

Pull the **perfect pint** in the **comfort**
of your own home!





Please read all of the instructions carefully and retain for future reference.

NOTE: UTILISING THIS APPLIANCE FOR ALCOHOL CONSUMPTION IS STRICTLY FOR THOSE OF THE LEGAL DRINKING AGE. IT IS RECOMMENDED ADULTS DO NOT CONSUME MORE THAN 14 UNITS PER WEEK. IT IS NOT RECOMMENDED TO CONSUME ALCOHOL WHILST PREGNANT.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Unless they are older than 8 and supervised, children should not use, perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep hands, fingers, hair and any loose clothing away from the moving tools of the appliance, as this could cause injury.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not leave the appliance unattended whilst it is switched on.

Do not use the appliance if it has been dropped, if there are visible signs of damage.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not store the appliance in direct sunlight or in high humidity conditions.

Remove the 2 x AA batteries before changing or fitting accessories.

Remove the 2 x AA batteries before any cleaning or user maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.



BATTERY SAFETY

Check that the battery compartment is secure.

Only batteries of the same or equivalent type as those recommended should be used with this appliance.

Batteries are to be inserted with the correct polarity.

Replace a full set of batteries at any one time.

Remove any batteries from the appliance when it is not being used for a long period of time to avoid leakage.

Exhausted batteries should be removed from the appliance to avoid leakage.

In the event of batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Seek medical advice immediately if a cell or battery has been swallowed.

Non-rechargeable batteries should not be recharged.

Rechargeable batteries must be removed from the appliance before being charged.

Rechargeable batteries should only be recharged under adult supervision.

When possible, remove the battery from the appliance when not in use.

Exhausted batteries must be removed and disposed of safely.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Do not expose batteries to heat or fire as they may explode.

Do not mix alkaline, standard (carbon zinc) and rechargeable batteries (nickel hydride).

Do not subject the batteries to mechanical shock.

Do not dispose of batteries in household waste.

To dispose of any batteries, take them to a local recycling station.

Contact the local government offices for details.

This appliance requires 2 x AA batteries (not included).

CARE AND MAINTENANCE

Before attempting any cleaning or maintenance, unscrew the top cap from the Beer Tap main body and remove the batteries.

STEP 1: Wipe the Beer Tap main body and non-electrical components with a soft, damp cloth and dry thoroughly.

STEP 2: Unscrew the Beer Tap main body from the pedestal to access and remove the insulation. Clean the interior with warm, soapy water and then rinse and dry thoroughly. Make sure that water does not come into contact with any electrical components.





STEP 3: Gently remove the gel tubes from the Beer Tap main body, wash in warm, soapy water and allow to dry thoroughly. After drying, reattach the gel tubes into the tube connector and secure in place on top of the Beer Tap main body. Feed the shorter gel tube through the tap, and the longer gel tube into the main body.

Do not immerse the Beer Tap main body in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the Beer Tap main body, as this could cause damage.

The Beer Tap and gel tubes are not safe for dishwasher use.

Note: The gel tubes should be cleaned after each use.

GETTING STARTED

Remove the Beer Tap from the box.

Remove any packaging from the Beer Tap.

Place the packaging inside the box and either store or dispose of safely.

IN THE BOX

Beer Tap

Instruction manual

DESCRIPTION OF PARTS



1. Beer Tap main body
2. Tap handle
3. Top cap
4. Pedestal

5. Base
6. Tap
7. Gel tubes (qty. 2) (Internal)
8. Tube connector (Internal)

BEFORE FIRST USE

Wipe the Beer Tap main body and non-electrical components with a soft, damp cloth and dry thoroughly.

Do not immerse the Beer Tap main body in water or any other liquid.

Note: When using the Beer Tap for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Beer Tap.

USING THE BEER TAP

STEP 1: Unscrew the top cap from the Beer Tap main body and unlock the battery compartment with a brass pin. Insert 2 x AA batteries into the compartment slot, being mindful of the correct polarity and screw to secure.

STEP 2: Disconnect the Beer Tap main body from the base. Fully open a 330/440/500 ml canned beer and place it on top of the Beer Tap main body.

STEP 3: Carefully feed the long gel tube into the beer, reconnect the Beer Tap main body onto the base and screw to secure.

STEP 4: Place a glass onto the base and pull the top handle to begin pouring. Push the top handle to produce foam.

Note: If cooling preservation is not required, remove the insulation from within the Beer Tap main body.

HINTS AND TIPS

- Use chilled beer.
- Use an etched pint glass.
- Wash the gel tubes regularly.
- Begin pouring by gently pulling the top handle; push back into position to finish pouring.

TROUBLESHOOTING

Problem	Cause	Solution
The Beer Tap is not pouring.	The batteries are out of power.	Replace the batteries (2 x AA).
The pouring speed is slowing down.	The batteries are running out.	Replace the batteries (2 x AA).
The gel tubes keep disconnecting from the tap.	The gel tubes are not properly secured.	Reattach the gel tubes into the tube connector. Feed the shorter gel tube through the tap, and the longer gel tube into the Beer Tap main body.

SPECIFICATIONS

Product code: EK3755GP

Battery: 2 x AA

Motor output: 1.5 V



CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:
The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK **USE ONLY** - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.


The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

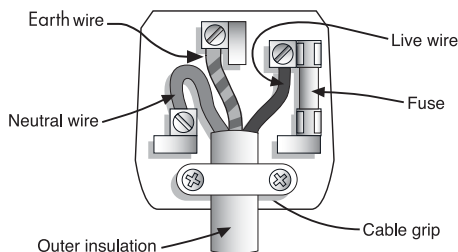

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.



UP GLOBAL SOURCING UK LTD.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2222*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Giles & Posner will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Manufactured by
UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.

CD210817/MD000000/V1

