



# 3 in 1 Treat Maker

INSTRUCTION MANUAL

Please retain instructions for future reference.

## **Safety Instructions**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling

the cord; switch it off and remove the plug by hand.  
Do not pull or carry the appliance by its power supply cord.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance whilst it is in use.  
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.  
Do not use sharp or abrasive items with this appliance; use only heat-resistant plastic or wooden spatulas to avoid damaging the non-stick surface.  
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.  
Always unplug the appliance after use and before any cleaning or user maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with the appliance.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.  
The outer surface of the appliance may get hot during operation.



**CAUTION:** Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

**WARNING:** Keep the appliance away from flammable materials.

## Care and Maintenance

Before attempting any cleaning or maintenance, unplug the treat maker from the mains power supply and check that it has fully cooled.

**STEP 1:** Wipe the treat maker housing with a soft, damp cloth and dry thoroughly.

**STEP 2:** Clean the accessories in warm, soapy water, then rinse and dry thoroughly.

 
**STEP 3:** Remove baked-on food by applying a small amount of warm water mixed with a mild detergent to the non-stick coated cooking plates, then wipe them clean with a paper towel. Use a nonabrasive scourer if the food is difficult to remove.

Do not immerse the treat maker in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the treat maker or its accessories, as this could damage the surface.

**NOTE:** The treat maker should be cleaned after every use.

## Description of Parts

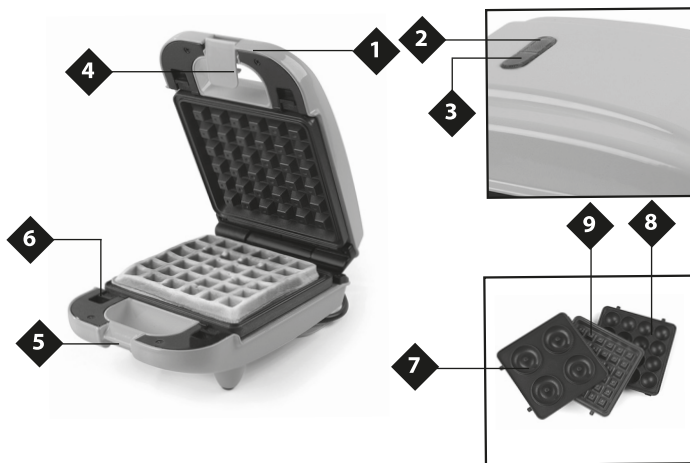

1. 3 in 1 Treat Maker housing
2. Green ready indicator light
3. Red power indicator light
4. Locking latch
5. Cool-touch handles

6. Plate release buttons
7. Doughnut plates
8. Cake pop plates
9. Waffle plates

## Instructions for Use

### Before First Use

**STEP 1:** Switch off and unplug the treat maker from the mains power supply.

**STEP 2:** Wipe the treat maker housing with a soft, damp cloth and dry thoroughly.

Clean the cooking plates in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the treat maker in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the treat maker, as this could cause damage.

**NOTE:** When using the treat maker for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the treat maker.

### Installing or Changing the Cooking Plates

**STEP 1:** Open the treat maker by unclipping the locking latch.

**STEP 2:** Select the required cooking plates, checking that both plates match.

**STEP 3:** Position the lower cooking plate inside the treat maker and align with the heating element. Press gently until it clicks into position. Repeat for the upper cooking plate.

**NOTE:** The non-stick plates will only fit one way into the treat maker.

### Using the 3 in 1 Treat Maker

**STEP 1:** Before each use, carefully apply a thin coat of cooking oil to the cooking plates, rubbing it in with a paper towel. This will help to prolong the life of the non-stick coating and stop food from sticking.

**STEP 2:** Prepare the ingredients to be cooked.

**STEP 3:** Install the required cooking plates, following the instructions in the section entitled 'Installing or Changing the Cooking Plates'.

**STEP 4:** Plug in and switch on the treat maker at the mains power supply and preheat for approx. 5 minutes. The red power indicator light will illuminate to indicate that the treat maker is preheating. The ready indicator light will illuminate once the required temperature has been reached and the treat maker is ready to use.

**STEP 5:** Using heat-resistant gloves, carefully release the locking latch and open the lid.

Add the prepared ingredients to the lower cooking plate and then carefully close the lid.

**STEP 6:** Cook for the required time; check periodically by carefully opening the lid.

**STEP 7:** Once cooking is complete, use heat-resistant gloves to carefully open the lid and then remove the treats with a heat-resistant plastic or wooden spatula.

**STEP 8:** Switch off and unplug the treat maker from the mains power supply.

**STEP 9:** Leave the lid open and allow to cool.

**NOTE:** Always preheat the cooking plates before starting to cook.

Allow plenty of time for the treat maker to cool before installing the other cooking plates.

During use, the green ready indicator light will cycle on and off to indicate that the treat maker is maintaining the temperature.

Do not overfill the cooking plates; the ingredients may expand whilst cooking.

When baking multiple batches of treats, close the lid after removing each batch to maintain the heat.

**CAUTION:** Exercise caution during cooking; the treat maker will emit steam.

**WARNING:** The treat maker and cooking plates get very hot during use; always use heat-resistant gloves to avoid injury.

### Removing the Cooking Plates

**STEP 1:** Allow the treat maker to cool fully before attempting to remove the cooking plates.

**STEP 2:** Simultaneously press both plate release buttons on the front of the treat maker; the cooking plates will pop up slightly, making it easier for them to be lifted off.

**STEP 3:** Remove each plate by holding it firmly with two hands, then slide and lift out of the treat maker.

**CAUTION:** Always allow the cooking plates to cool fully before attempting to remove them from the treat maker; failure to do so will cause injury.

### Using the Cake Pop Plates

**STEP 1:** Once the ready indicator light has illuminated, pour the prepared batter into the centre of each well on the lower cake pop plate, then close the lid.

**STEP 2:** Cook for approx. 6 minutes or until the cake pops are golden brown and soft to touch. Check the cooking progress periodically by carefully opening the lid.

**STEP 3:** Once cooking is complete, switch off and unplug the treat maker from the mains power supply. Leave the lid open and allow to cool.

**STEP 4:** Carefully remove the cake pops by gently loosening the edges from the cake pop plate using a heatproof plastic or wooden spatula.

**STEP 5:** Once cool, the cake pop plates can be removed and washed in warm, soapy water and dried thoroughly.

**NOTE:** Do not overfill the wells as the cake pop batter will expand during cooking. Fill each well to approx.  $\frac{2}{3}$  of its capacity.

**WARNING:** Exercise caution when using the treat maker to avoid contact with escaping heat and steam.

### Using the Doughnut Plates

**STEP 1:** Once the ready indicator light has illuminated, pour the prepared batter into the centre of each well on the lower doughnut plate and then close the lid.

**STEP 2:** Cook for approx. 8 minutes or until the doughnuts are golden brown and soft to touch. Check the cooking progress periodically by carefully opening the lid.

**STEP 3:** Once cooking is complete, unplug the treat maker from the mains power supply to turn it off. Leave the lid open and allow to cool.

**STEP 4:** Carefully remove the doughnuts by gently loosening the edges from the doughnut plate with a heatproof plastic or wooden spatula.

**STEP 5:** Once cool, the doughnut plates can be removed and washed in warm, soapy water and dried thoroughly.

**NOTE:** Do not overfill the wells as the doughnut batter will expand during cooking. Fill each well to approx.  $\frac{2}{3}$  of its capacity.

**WARNING:** Exercise caution when using the treat maker to avoid contact with escaping heat and steam.

### Using the Waffle Plates

**STEP 1:** Once the ready indicator light has illuminated, pour the prepared batter into the centre of each mould on the lower waffle plate. Spread it out using a heatproof plastic or wooden spatula and close the lid.

**STEP 2:** Cook for approx. 6 minutes or until the waffles are golden brown and soft to touch. Check the cooking progress periodically by carefully opening the lid.

**STEP 3:** Once cooking is complete, unplug the treat maker from the mains power supply to turn it off. Leave the lid open and allow to cool.

**STEP 4:** Carefully remove the waffles by gently loosening the edges from the waffle plate using a heatproof plastic or wooden spatula.

**STEP 5:** Once cool, the waffle plates can be removed, washed in warm, soapy water and dried thoroughly.

**NOTE:** Do not overfill the moulds as the waffle batter will expand during cooking. Fill each mould to approx.  $\frac{2}{3}$  of its capacity.

**WARNING:** Exercise caution when using the treat maker to avoid contact with escaping heat and steam.

### Hints and Tips

1. Be careful not to over-mix the cake pop, doughnut or waffle batter as this can affect the texture of the treats.
2. Sieving dry ingredients, such as flour, will help to guarantee a smooth consistency and avoid any lumps.
3. Always use butter or cooking oil to precondition the non-stick plates. This will help to protect the non-stick coating and make it easier to remove the finished snacks.
4. Wait for the batter to distribute evenly to avoid the risk of overfilling.
5. Avoid opening the treat maker during the first few minutes of cooking, as it will allow heat to escape.
6. Using heat-resistant plastic or wooden utensils will help to protect the non-stick coating.
7. If short of time, prepare the ingredients in advance so that all that is left to do is cook the snacks.
8. If coating doughnuts in sugar, it is best to do so whilst they are still warm.



## Storage

Before storing in a cool, dry place, check that the treat maker is cool, clean and dry.  
Never wrap the cord tightly around the treat maker; wrap it loosely to avoid causing damage.

 
## Troubleshooting

Symptom	Possible Cause	Corrective Action
The cooking plates will not fit into the treat maker.	The cooking plates have not been aligned properly.	Make sure that the cooking plates are aligned and locked into position.  Check that the cooking plates are sufficiently cool, as heat can cause certain materials to expand

## Specifications

Product Code: EK4943GSPP  
Input: 220–240 V~50 Hz  
Output: 650 W



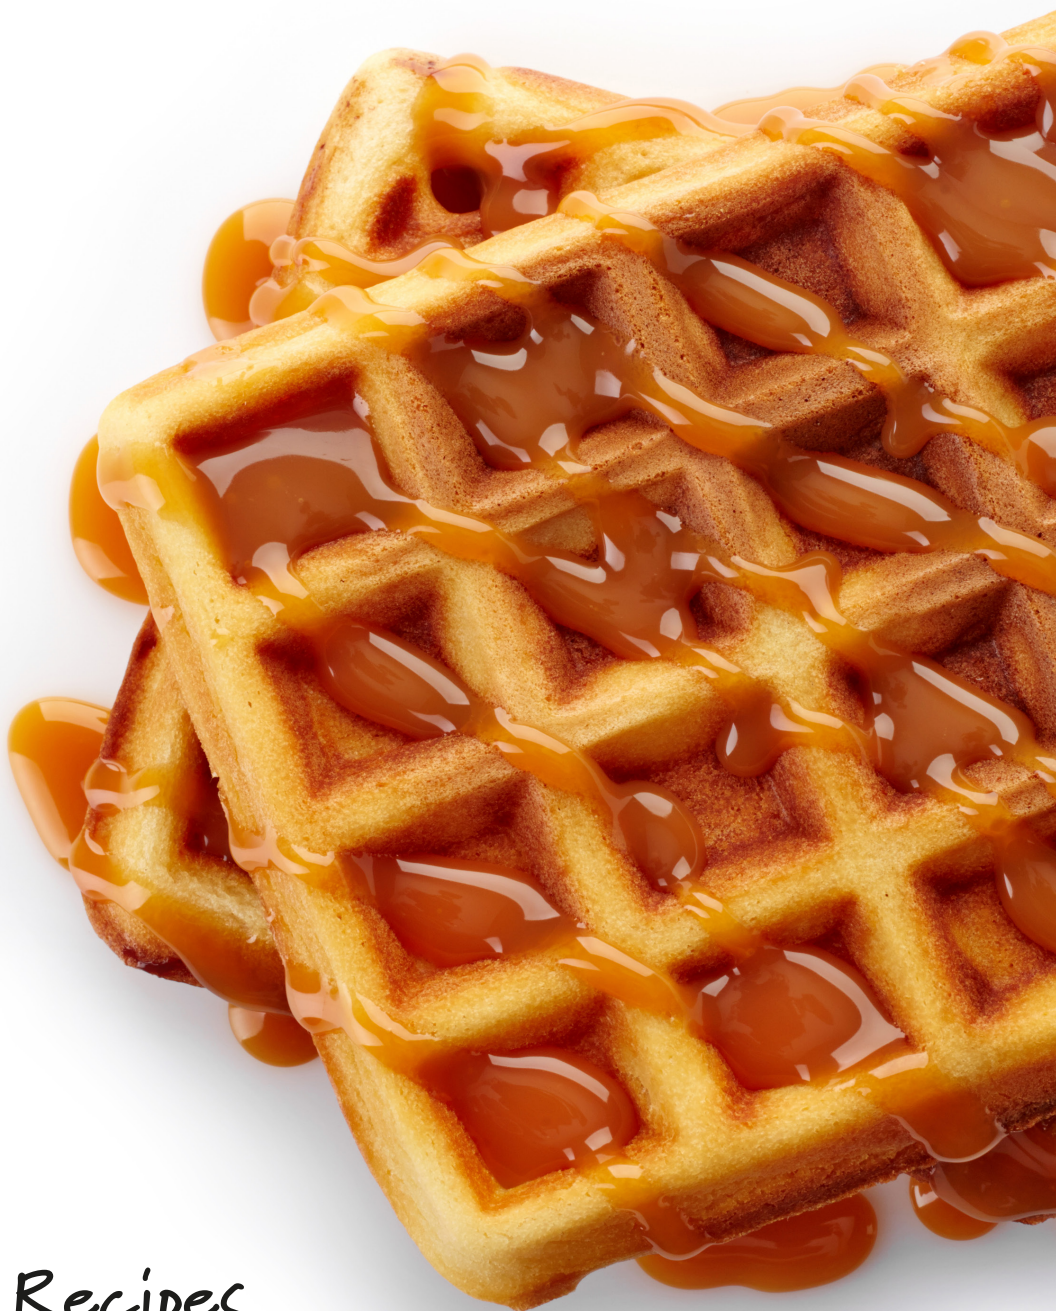

## Recipes

\* Any recipe images used in this instruction manual are intended for illustrative purposes only.

## Recipes

The help of a food processor is recommended but ingredients can also be mixed by hand.

Vanilla Cake Pops

Makes approx. 24 cake pops

### Ingredients

100 g self-raising flour

100 g caster sugar

100 g margarine

2 medium eggs

$\frac{1}{2}$  tsp vanilla essence

$\frac{1}{2}$  tsp baking powder

### Method

Cream together the margarine and sugar using a food processor until light and fluffy.

Add the eggs one at a time, the vanilla essence and the baking powder, with a little flour each time, until well mixed.

Mixing on a medium speed, add the remaining flour little by little until the ingredients are combined.

Preheat the treat maker and then carefully fill each cake pop well with the batter. Ensure that each well is filled by  $\frac{2}{3}$ . Close the treat maker and bake for approx. 4–6 minutes or until golden brown.

**NOTE:** The baking time can be increased or decreased to suit personal taste.

### Decorating

There are a variety of ingredients available for decorating as well as many websites specialising in such creations.

Cake pops can simply be dipped in melted chocolate, finely chopped nuts, glitter or any kind of sprinkles. For more experienced cake makers, icing sugar and marzipan can be used for cake pop creations.

Cake pop sticks can be purchased in specialist cake shops and from internet websites.

## Mini Doughnuts

### Ingredients

225 g plain flour	4 tbsp cooking oil
112 g sugar	1 tbsp baking powder
1 egg	½ tsp vanilla essence
225 ml milk	

### Method

Place the flour, sugar and baking powder together into a mixing bowl.

Create a well in the centre of the ingredients and add the milk, egg, vanilla and oil.

Using a mixer, mix the ingredients thoroughly to produce a smooth batter.

Preheat the treat maker and then carefully fill each doughnut well with batter. Ensure that each well is filled by  $\frac{2}{3}$ . Close the treat maker and bake for approx. 6–8 minutes or until golden brown.

Test the mini doughnut with a toothpick; if the toothpick comes out clean, the mini doughnuts are ready.

Carefully remove the mini doughnuts using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack or serve warm.

## Basic Waffles

### Ingredients

150 g plain flour	1 tbsp sugar
1 egg	2 tsp baking powder
300 ml milk	Pinch of salt
2 tbsp vegetable oil	

### Method

Sift the flour and baking powder into a large bowl, then stir in the sugar and salt.

Make a well in the centre of the mixture.

In a separate bowl, beat the egg, milk and oil together and then pour the mixture into the well that has just been made in the other bowl.

Mix all of the ingredients together to form a smooth, thick batter.

Preheat the treat maker and then carefully fill each waffle well with batter. Ensure that each well is filled by  $\frac{2}{3}$ . Close the treat maker and bake for approx. 4–6 minutes or until golden brown.

Carefully remove the waffles using a heat-resistant plastic or wooden spatula and leave to cool on a wire rack.

## Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

### Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details  
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

 
The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked  $\perp$ .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

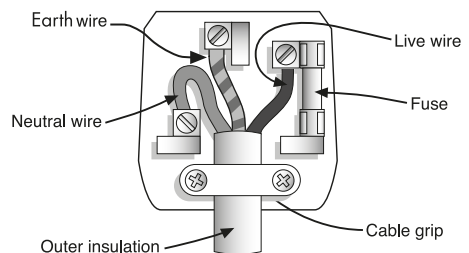

### Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,  
UK. Manchester OL9 0DD.  
Germany. 51149 Köln..**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **[www.gilesandposner.com](http://www.gilesandposner.com)**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**


All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Giles and Posner will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.


Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

## **Disposal of Waste Batteries and Electrical and Electronic Equipment**

 This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Find us on 

[www.facebook.com/GilesAndPosner](http://www.facebook.com/GilesAndPosner)

\*To be eligible for the extended guarantee,  
go to **[guarantee.upgs.com/giles-and-posner](http://guarantee.upgs.com/giles-and-posner)** and  
register your product within 30 days of purchase.

Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.

**MADE IN CHINA.**

**[www.upgs.com/giles-posner](http://www.upgs.com/giles-posner)**

©Giles & Posner trademark. All rights reserved.

CD 061021/MD291121/V2



**2**  
*year\**  
**GUARANTEE**