

**AMERICAN**  
*originals*

# POPCORN MAKER

MAKE DELICIOUS POPCORN IN MINUTES



NOW SHOWING  
**NIGHT OF THE  
DEMON POPCORN**

**INSTRUCTION MANUAL**

Please retain instructions for future reference.

## **SAFETY INSTRUCTIONS**

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from other heat emitting appliances.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not overload the appliance.

Do not leave the appliance unattended whilst connected to the mains power supply.

The logo features the word "AMERICAN" in a bold, sans-serif font above the word "originals" in a smaller, cursive font. The text is centered within a dark oval with a light-colored border. The entire logo is set against a background of a grey banner with white stars.

**AMERICAN**  
*originals*

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.

**CAUTION:** Hot surface – do not touch the hot section or heating components of the appliance.

Take care not to pour water on the heating element.

**WARNING:** Keep the appliance away from flammable materials.

## CARE AND MAINTENANCE

Switch off and unplug the Popcorn Maker from the mains power supply and allow to cool fully before performing any cleaning or user maintenance.

Wash the top cover and measuring cup in warm, soapy water, then rinse and dry thoroughly.

Wipe the Popcorn Maker with a soft, damp cloth and allow to

**AMERICAN**  
*originals*

dry thoroughly.

Never immerse the Popcorn Maker in water or any other liquid. Do not use harsh or abrasive detergents or scourers to clean the Popcorn Maker, as this could cause damage.

The Popcorn Maker is not suitable for use in a dishwasher.

Always clean the Popcorn Maker immediately after each use.

## DESCRIPTION OF PARTS



1. Popcorn Maker main unit
2. Popcorn inlet
3. Popcorn outlet
4. On/Off switch

5. Measuring cup
6. Top cover
7. Spout
8. Aluminium heat chamber

**AMERICAN**  
*originals*

## INSTRUCTIONS FOR USE

### BEFORE FIRST USE

Before using the Popcorn Maker for the first time, clean it following the instructions in the section entitled 'Care and Maintenance'.

**NOTE:** When using the Popcorn Maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Popcorn Maker.

### USING THE POPCORN MAKER

**STEP 1:** Place the Popcorn Maker onto a flat, stable surface, at a height that is comfortable for the user.

**STEP 2:** Put one measuring cup full of popcorn kernels into the aluminium heat chamber through the popcorn inlet.

Do not use more than one measuring cup of popcorn at a time, as this will overflow the Popcorn Maker and could result in damage.

**STEP 3:** Secure the measuring cup onto the top cover to prevent losing any popcorn as it cooks.

**STEP 4:** Place a large bowl underneath the spout, taking care that the edge of the bowl touches the Popcorn Maker.

**STEP 5:** Plug in and switch on the Popcorn Maker at the mains power supply. Turn on the Popcorn Maker using the on/off switch.

It will take approx. 3 minutes for all of the popcorn kernels to pop.

**STEP 6:** When all of the popcorn is made, turn off the Popcorn Maker using the on/off switch and unplug it from the mains power supply.

Allow the Popcorn Maker to cool for approx. 10–12 minutes before using it again.

**WARNING:** Some popcorn kernels may not expand or puff properly and may escape from the popcorn outlet during operation. Exercise caution and avoid immediate contact with the popcorn kernels, as they will be very hot.

### STORAGE

Check that the Popcorn Maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the power supply cord tightly around the Popcorn Maker; wrap it loosely to avoid causing damage.

### SPECIFICATIONS

Product Code: EK0493HAR

Input: 220–240 V ~ 50–60 Hz

Output: 1200 W

**AMERICAN**  
*originals*

## CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

### IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth ( $\perp$ )

FOR UK USE ONLY - Plug fitting details (where applicable).

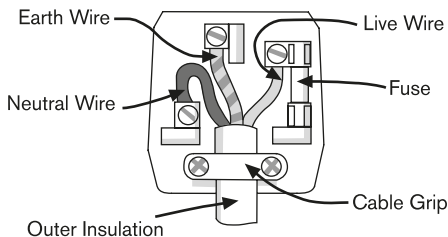

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked  $\perp$ .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal ( $\perp$ ).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

### NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**AMERICAN**  
*originals*

**UP GLOBAL SOURCING UK LTD.,  
UK. MANCHESTER OL9 0DD.  
GERMANY. 51149 KÖLN.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at [www.upgs.com/american-originals/](http://www.upgs.com/american-originals/)

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **GUARANTEE**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, American Originals will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

### **Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

**AMERICAN**  
*originals*

POPCORN MAKER



UK CA CE

Manufactured by:  
UP Global Sourcing UK Ltd.,  
**UK.** Manchester OL9 0DD.  
**Germany.** 51149 Köln.



[www.upgs.com/american-originals/](http://www.upgs.com/american-originals/)



Made in China

CD160218/MD060922/V8