



Mini
Chopper
INSTRUCTION MANUAL

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Children under 8 may not use the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.

Do not overload the appliance as the mixture level may rise during blending.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

WARNING: Do not touch sharp blades.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off and unplug the chopper from the mains power supply and allow it to cool fully.

STEP 1: Wipe the chopper main unit with a soft, damp cloth and allow to dry thoroughly.

STEP 2: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.

Never touch the blades; using extreme caution, clean the blades with a brush and dry carefully.

Do not immerse the chopper main unit in water or any other liquid.


Do not use harsh or abrasive detergents or scourers to clean the chopper, as this could cause damage.

The chopper is not safe for dishwasher use.

NOTE: The chopper should be cleaned after each use.

WARNING: Handle the chopping attachment with care as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing any attachments.

Description of Parts

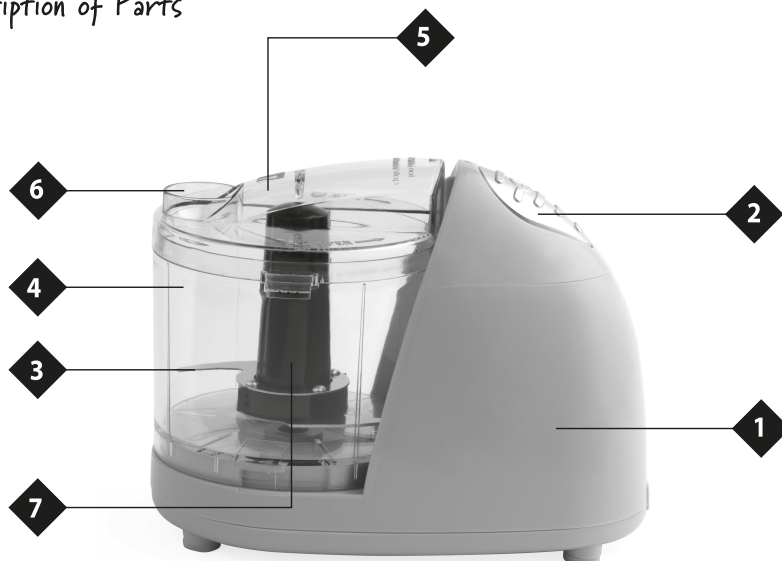

1. Mini Chopper main unit
2. On/Off button
3. Chopping attachment
4. Chopping bowl

5. Chopping bowl lid
6. Feeding chute
7. Pin

Instructions for Use

Before First Use

Wash all of the attachments in warm, soapy water, then rinse and dry thoroughly. Wipe the chopper main unit with a soft, damp cloth and allow to dry thoroughly. Never touch the blades; the chopping attachment should be washed using a brush and dried carefully. Do not immerse the chopper main unit in water or any other liquid.

NOTE: When using the chopper for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the chopper.

Using the Mini Chopper

All attachments must be securely fitted before use; do not attempt to remove them until the blades have stopped moving.

STEP 1: Place the chopping bowl onto the chopper main unit, aligning the tabs and rotating the chopping bowl in a clockwise direction until it locks into place.

STEP 2: Insert the chopping attachment into the chopping bowl, aligning the tabs on the pin with the blade.

Carefully twist in a clockwise direction until it is fixed securely in place.

STEP 3: Add the food to be chopped to the chopping bowl.

STEP 4: Place the lid onto the chopping bowl and secure by aligning the tabs and then twisting it in a clockwise direction until it locks into position.

STEP 5: Plug in and switch on the chopper at the mains power supply.

STEP 6: Holding the chopping bowl steady, press and hold the on/off button until the food is chopped to the required size. Release the on/off button and wait for the blades to stop rotating before removing the chopping bowl lid.

STEP 7: Additional food may be added to the chopped ingredients by removing the chopping bowl lid, adding the ingredients, replacing the lid and repeating the chopping process. Alternatively, oil and seasoning can be added using the feeding chute.

STEP 8: To remove the chopping bowl from the chopper main unit, remove the lid and carefully remove the chopping attachment without touching the blade itself. Twist the chopping bowl in an anticlockwise direction and pull it away from the chopper main unit.

CAUTION: Switch off and unplug the chopper from the mains power supply before adding or removing food from the chopping bowl.

WARNING: Do not operate the chopper without food, as this can cause damage.

Switch off and unplug the chopper from the mains power supply before attempting to remove the chopping attachment and before cleaning.

Max. operation time is 1½ minutes. Allow to cool for 1 minute before using the chopper again.

Storage

Check that the chopper is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the chopper; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The chopper will not operate.	The chopper is not connected to the mains power supply. The chopper is not correctly assembled.	Plug in and switch on the chopper at the mains power supply. Check that the chopper has been properly assembled and that the chopping bowl and lid are secured into place.
Dry ingredients are clumping together.	The chopping bowl is wet.	Dry the chopping bowl thoroughly before adding ingredients.
There are large chunks of ingredients after chopping.	The chopping bowl has been overfilled.	Remove some of the ingredients and chop in batches.

Specifications

Product code: EK2182

Input: 220–240 V ~ 50/60 Hz

Output: 150 W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)


FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK. The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED. On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

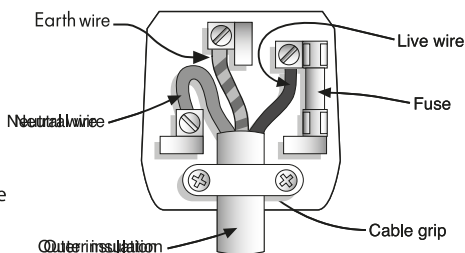

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.upgs.com/giles-posner

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Giles and Posner will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.


Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Find us on 

www.facebook.com/GilesAndPosner

*To be eligible for the extended guarantee,
go to **guarantee.upgs.com/giles-and-posner** and
register your product within 30 days of purchase.

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

MADE IN CHINA.

www.upgs.com/giles-posner

©Giles & Posner trademark. All rights reserved.

CD030420/MD181022/V4



2
year*
GUARANTEE