



Russell Hobbs

24 CM STAINLESS STEEL STOCK POT

INSTRUCTION MANUAL

Please retain instructions for future reference.

IMPORTANT!

Lids and handles may become hot during cooking. Always use heat-resistant oven gloves to move or handle the cookware.

BEFORE FIRST USE

Hand-wash thoroughly.

USING THE COOKWARE



Suitable for use on hobs only, including induction.

For optimum energy efficiency, place the cookware on hob rings equivalent to the base size.

Do not let flames overlap the sides or handles.

To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils.

Do not use metal utensils.

Do not overheat the cookware or allow to boil dry.

Never leave unattended whilst in use.

To avoid pitting, never leave salty foods in the cookware before or after cooking.

To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface.

Screws may loosen over time; using a screwdriver, carefully retighten them.

CLEANING AND STORING THE COOKWARE

Always allow to cool before cleaning.

The cookware is safe for dishwasher use with mild detergents.

Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly.

Do not store wet cookware.

CAUTION

Always use heat-resistant oven gloves to move the cookware.

Never expose hot cookware to cold liquid.

If there is any evidence of damage to the cookware, dispose of it carefully.

Supplied by UP Global Sourcing UK Ltd., UK. Manchester OL9 0DD. Germany. 51149 Köln
under licence from Spectrum Brands (UK) Limited.

Russell Hobbs is the registered trademark of Spectrum Brands (UK) Limited.

www.russellhobbs.com

Made in China.

CD170221/MD210922/V2

