



# Russell Hobbs

Please retain instructions for future reference.

## BEFORE FIRST USE

Hand-wash thoroughly.

## USING THE COOKWARE



Suitable for use on hobs only, including induction.

For optimum energy efficiency, place the cookware on hob rings equivalent to the base size.

Do not let flames overlap the sides or handles.

To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils.

Do not overheat the cookware or allow to boil dry.

Never leave unattended whilst in use.

The non-stick coating is prone to discolouration. This has no effect on the functionality of the cookware.

To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface.

Screws may loosen over time; using a screwdriver, carefully retighten them.

## DIAMONDSTONE 6 PIECE KITCHEN SET

### CLEANING AND STORING THE COOKWARE

Always allow to cool before cleaning. This cookware is not dishwasher safe. Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly.

Do not store wet cookware.

### CAUTION

Always use heat-resistant oven gloves to move the cookware.

Never expose hot cookware to cold liquid.

If there is any evidence of damage to the cookware, dispose of it carefully.

### CLEANING AND USING THE UTENSILS

Before first use, wash in warm, soapy water, rinse and dry thoroughly.

Handwash only. Not safe for dishwasher use.

Do not use harsh abrasive cleaners or scourers.

Do not soak.

Do not use on or near direct heat sources, not suitable for temperatures over 210 °C.

Supplied by

UP Global Sourcing UK Ltd., UK, Manchester OL9 0DD, Germany, 51149 Köln  
under licence from Spectrum Brands (UK) Limited.

Russell Hobbs is the registered trademark of Spectrum Brands (UK) Limited.

[www.russellhobbs.com](http://www.russellhobbs.com)

Made in China.

CD140722/MD000000/V1

