


AMERICAN
originals

ICE CREAM MAKER

MAKE DELICIOUS, HOME-MADE ICE CREAM EVERY TIME

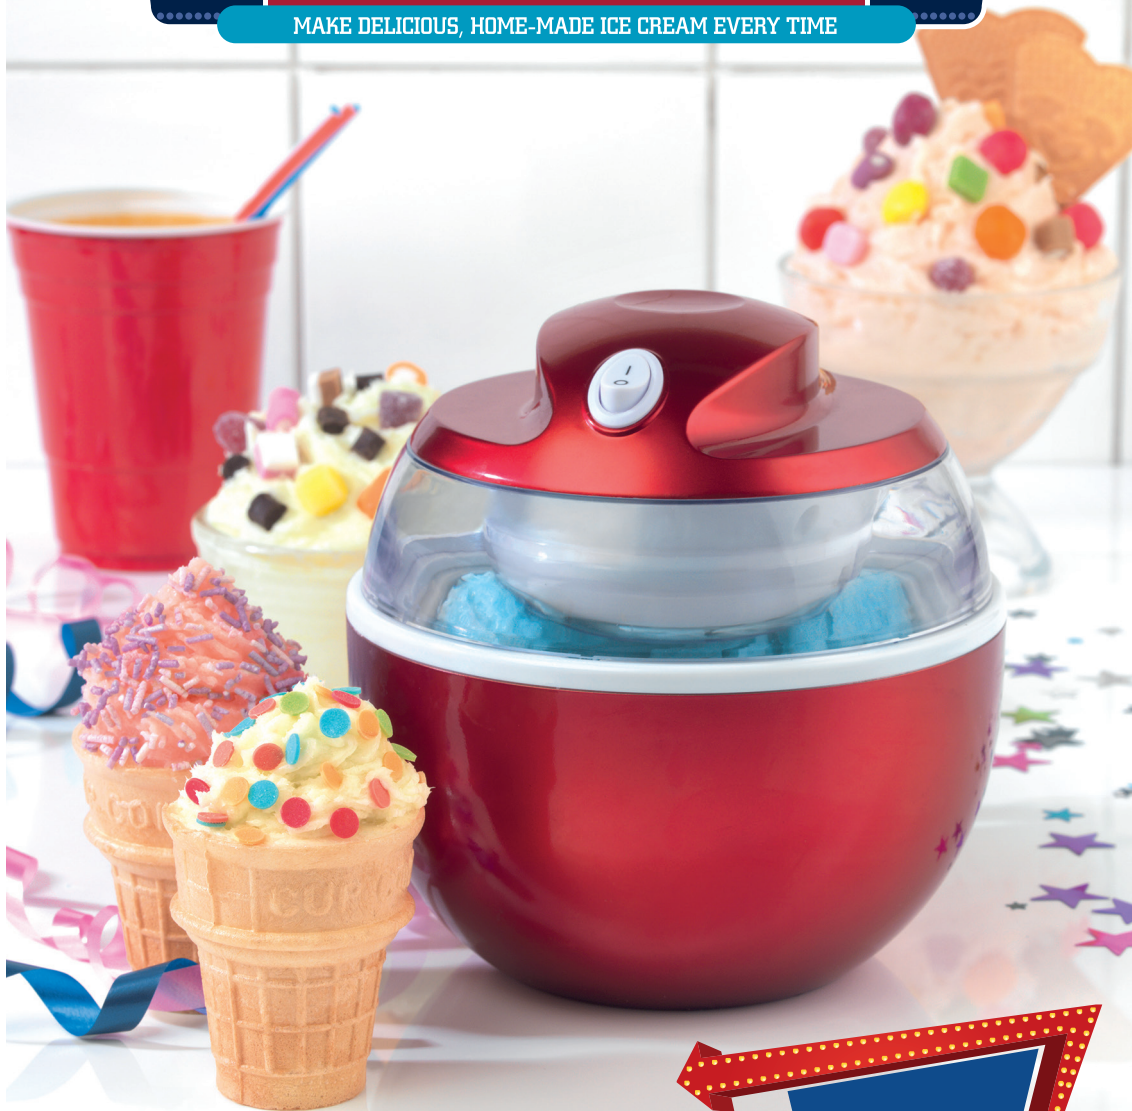

NOW SHOWING
**THE ICE CREAM FROM
ANOTHER WORLD**

INSTRUCTION MANUAL

Please read all of the instructions carefully before use and retain for future reference.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the appliance away from heat emitting appliances.

Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.

The logo features the word "AMERICAN" in a bold, uppercase, sans-serif font, with "originals" in a smaller, lowercase, cursive font directly below it. The text is centered within a dark oval shape that has a metallic, three-dimensional appearance with a silver border and a dark grey center. The logo is positioned at the top of a vertical grey bar that extends to the bottom of the page.

AMERICAN
originals

Do not touch any moving parts on this appliance during use, as this could cause injury.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not use broken or loose cutting or rotating blades.

Do not overload the appliance as the mixture level may rise during blending.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance whilst it is in use.

Do not use sharp or abrasive items with this appliance; use only plastic or wooden spatulas to avoid damaging the surface.

Do not place boiling water or very hot liquid in the appliance.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always use the appliance on a stable surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: Keep the appliance away from flammable materials.

The logo features the word "AMERICAN" in a bold, sans-serif font inside a dark oval with a light border. Below it, the word "originals" is written in a smaller, cursive script font.

AMERICAN
originals

CARE AND MAINTENANCE

Always unplug the Ice Cream Maker from the mains power supply and allow it to reach room temperature before performing any cleaning or user maintenance.

STEP 1: Wash the transparent cover, paddle and fast-freezing bowl in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the Ice Cream Maker power unit with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the Ice Cream Maker power unit in water or any other liquid.

Never use harsh or abrasive detergents or scourers to clean the Ice Cream Maker, as this could cause damage.

Note: The Ice Cream Maker and its accessories are not dishwasher safe.

Always clean the Ice Cream Maker immediately after each use.

GETTING STARTED

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and store or dispose of safely.

IN THE BOX

Ice Cream Maker

Instruction Manual

FEATURES

Quick, fun and easy to use

Creates delicious ice cream

Viewing window

0.6 L fast-freezing bowl

The logo features the word "AMERICAN" in a bold, white, sans-serif font, with "originals" in a smaller, white, cursive font below it. The text is centered within a dark oval shape that has a metallic, silver-colored border. The background of the entire page is dark grey with a decorative border of white stars at the top and bottom.

AMERICAN
originals

DESCRIPTION OF PARTS



INSTRUCTIONS FOR USE

BEFORE FIRST USE

STEP 1: Switch off and unplug the Ice Cream Maker from the mains power supply.

STEP 2: Wipe the Ice Cream Maker with a soft, damp cloth and dry thoroughly.

STEP 3: Clean the accessories in warm, soapy water, then rinse and allow to dry naturally.

Do not immerse the Ice Cream Maker power unit in water or any other liquid. Never use harsh or abrasive cleaning detergents or scourers to clean the Ice Cream Maker or its accessories, as this could cause damage.

Note: When using the Ice Cream Maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the Ice Cream Maker.

AMERICAN
originals

ASSEMBLING THE ICE CREAM MAKER

The Ice Cream Maker comes preassembled. If disassembled due to cleaning, check that the Ice Cream Maker is dry and switched off and unplugged from the mains power supply before reassembling.

STEP 1: To assemble the lid, slot the transparent cover onto the Ice Cream Maker power unit by aligning the holes with the corresponding clips.

STEP 2: Insert the paddle into the central hole in the Ice Cream Maker power unit.

STEP 3: Place the assembled lid onto the fast-freezing bowl; it should sit neatly with the tabs slotting into the corresponding wells on the rim.

USING THE ICE CREAM MAKER

STEP 1: Approx. twelve hours before making the ice cream, place the fast-freezing bowl into the freezer to chill. The freezer should be set to a temperature of approx. -18°C .

STEP 2: Prepare the ice cream of choice and place it in the fridge to cool.

STEP 3: Once the fast-freezing bowl has chilled to the required temperature, remove it from the freezer and place it onto a flat, stable surface, at a height that is comfortable for the user.

STEP 4: Pour the ice cream mixture into the fast-freezing bowl, leaving a 4 cm gap between the mixture and the rim.

STEP 5: Assemble the rest of the Ice Cream Maker as instructed in the section entitled 'Assembling the Ice Cream Maker'.

STEP 6: Plug in and switch on the Ice Cream Maker at the mains power supply.

STEP 7: Turn on the Ice Cream Maker using the On/Off switch. It will take between 30-45 minutes for the mixture to reach the desired consistency.

STEP 8: Once the desired consistency has been achieved, turn off the Ice Cream Maker using the On/Off switch, unplug it from the mains power supply and then remove the lid.

AMERICAN
originals

HINTS AND TIPS

Once the ice cream mixture has reached the desired consistency, place the fast-freezing bowl into the freezer until ready to serve.

The freezer should be set to a temperature of -18°C or below when preparing the fast-freezing bowl.

Refrigerate the ice cream mixture beforehand to aid the ice cream making process. Do not shake, puncture or heat the fast-freezing bowl, as this could cause damage. Do not add alcohol to the ice cream mixture, as this will prevent the mixture from freezing.

STORAGE

Check that the Ice Cream Maker and its accessories are cool, clean and dry before storing in a cool, dry place.

Never wrap the power supply cord tightly around the Ice Cream Maker; wrap it loosely to avoid causing damage.

Store the fast-freezing bowl in the freezer at all times so that it is always ready to use.

SPECIFICATIONS

Product Code: EK2208AD

Input: 220–240 V ~ 50/60 Hz

Output: 7 W



AMERICAN
originals



BANANA ICE CREAM

INGREDIENTS

- ½ large, ripe banana
- 50 ml skimmed milk
- 25 ml double cream
- 12 g icing sugar

METHOD

Mash the banana until smooth. Mix in the milk, double cream and icing sugar. Pour the mixture into the fast-freezing bowl. Turn on the Ice Cream Maker and secure the lid. Let the paddle run until the ice cream reaches the desired consistency. Place the fast-freezing bowl into the freezer until ready to serve.

MINT CHOCOLATE ICE CREAM

INGREDIENTS

- 50 ml skimmed milk
- 50 ml double cream
- 12 g icing sugar
- 12 g grated chocolate
- Peppermint extract, to taste



METHOD

Mix in the milk, double cream and icing sugar. Stir the peppermint extract into the mixture. Add the grated chocolate. Pour the mixture into the fast-freezing bowl. Turn on the Ice Cream Maker. Let the paddle run until the ice cream reaches the desired consistency. Place the fast-freezing bowl into the freezer until ready to serve.

AMERICAN
originals



MANGO SORBET

INGREDIENTS

- 1 fresh mango, peeled, stone removed
- 1 lemon, juice only
- 100 g icing sugar, sifted

METHOD

Roughly chop the mango flesh and place into a food processor with the icing sugar and lemon juice. Blend to a purée. Pour the mixture into the fast-freezing bowl. Turn on the Ice Cream Maker and secure the lid. Let the paddle run until the sorbet reaches the desired consistency. Place the fast-freezing bowl into the freezer until ready to serve.

RASPBERRY FROZEN YOGHURT

INGREDIENTS

- 100 g fresh raspberries
- 100 ml natural yoghurt
- 35 g icing sugar



METHOD

Mash the raspberries until smooth. Mix in the icing sugar and natural yoghurt. Pour the mixture into the fast-freezing bowl. Turn on the Ice Cream Maker and secure the lid. Let the paddle run until the frozen yoghurt reaches the desired consistency. Place the fast-freezing bowl into the freezer until ready to serve.

* Any recipe images used in this instruction manual are intended for illustrative purposes only.

AMERICAN
originals

CONNECTION TO THE MAINS

Please check that the voltage indicated on the product corresponds with your supply voltage.

IMPORTANT


As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

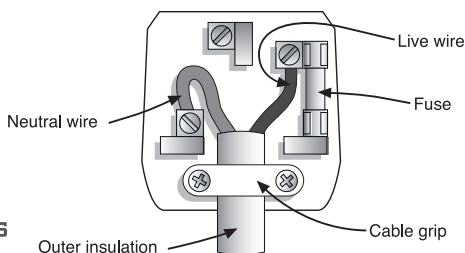

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (⊕).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

AMERICAN
originals

UP GLOBAL SOURCING UK LTD.,

Victoria Street, Manchester OL9 0DD. UK.

If this product does not reach you in an acceptable condition, please contact our Customer Services Department using one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday – Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required. If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

GUARANTEE

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, American Originals will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.



The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

AMERICAN
originals



Manufactured by
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.

Made in China

CD090617/MD000000/V1