



# User manual

Popcorn Maker

---

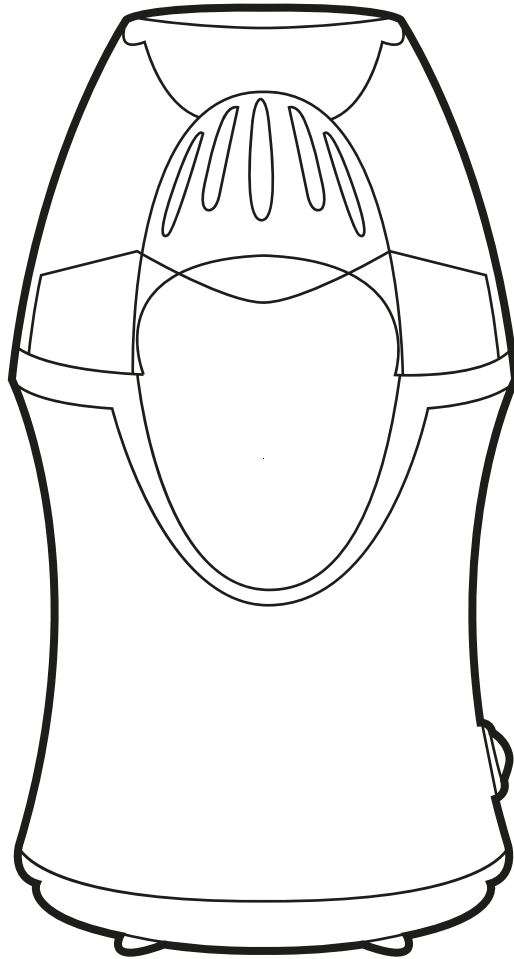

## Description of parts

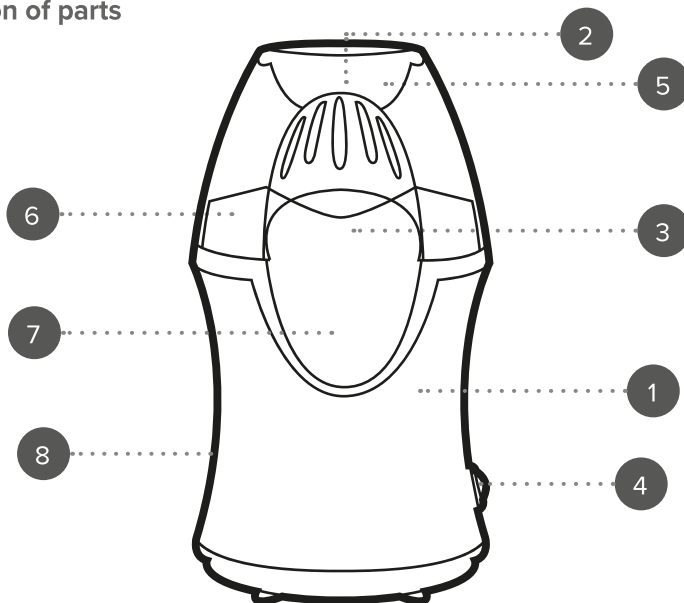

- |                            |                                    |
|----------------------------|------------------------------------|
| 1. Popcorn maker main unit | 5. Measuring cup                   |
| 2. Popcorn inlet           | 6. Top cover                       |
| 3. Popcorn outlet          | 7. Spout                           |
| 4. On/off switch           | 8. Aluminium heat chamber (inside) |

Please retain instructions for future reference.

## SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.

Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of reach of children.  
Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.  
Keep the power supply cord away from any parts of the appliance that may become hot during use.  
Keep the appliance away from other heat emitting appliances.  
Do not immerse the appliance in water or any other liquid.  
Do not operate the appliance with wet hands.  
Do not overload the appliance.  
Do not leave the appliance unattended whilst connected to the mains power supply.  
Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.  
Do not use the appliance for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not use this appliance outdoors.  
Do not store the appliance in direct sunlight or in high humidity conditions.  
Do not move the appliance whilst it is in use.  
Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.  
Always unplug the appliance after use and before any cleaning or user maintenance.  
Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.  
Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.  
Use of an extension cord with the appliance is not recommended.  
This appliance should not be operated by means of an external timer or separate remote control system, other than that supplied with this appliance.  
This appliance is intended for domestic use only. It should not be used for commercial purposes.  
The outer surface of the appliance may get hot during operation.



**CAUTION:** Hot surface - Do not touch the hot section or heating components of the appliance. Take care not to pour water on the heating element.



**WARNING:** Keep the appliance away from flammable materials.

## Care and maintenance

Switch off and unplug the popcorn maker from the mains power supply and allow to cool fully before performing any cleaning or user maintenance.

**STEP 1:** Wash the top cover and measuring cup in warm, soapy water, then rinse and dry thoroughly.

**STEP 2:** Wipe the popcorn maker with a soft, damp cloth and allow to dry thoroughly.

Never immerse the popcorn maker in water or any other liquid.

Do not use harsh or abrasive detergents or scourers to clean the popcorn maker, as this could cause damage.



**NOTE:** The popcorn maker is not suitable for use in a dishwasher. Always clean the popcorn maker before, and immediately after use.

## Instructions for use

### Before first use

Before using the popcorn maker for the first time, wipe it down with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the popcorn maker in water or any other liquid.



**NOTE:** When using the popcorn maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the popcorn maker.

### Using the popcorn maker

**STEP 1:** Place the popcorn maker onto a flat, stable surface, at a height that is comfortable for the user.

**STEP 2:** Put one measuring cup full of popcorn kernels into the aluminium heat chamber through the popcorn inlet.

**STEP 3:** Do not use more than one measuring cup of popcorn at a time, as this will overfill the popcorn maker and could result in damage.

**STEP 4:** Secure the measuring cup onto the top cover to prevent losing any popcorn as it cooks.

**STEP 5:** Place a large bowl underneath the spout, taking care that the edge of the bowl touches the popcorn maker.

**STEP 6:** Plug in and switch on the popcorn maker at the mains power supply. Turn on the popcorn maker using the on/off switch.

It will take approx. three minutes for all of the popcorn kernels to pop.

**STEP 7:** When all of the popcorn is made, turn off the popcorn maker using the on/off switch and unplug it from the mains power supply.

Allow the popcorn maker to cool for approx. 10–12 minutes before using it again.



**WARNING:** Some popcorn kernels may not expand or puff properly and may escape from the popcorn outlet during operation. Exercise caution and avoid immediate contact with the popcorn kernels, as they will be very hot. Do not run unit without popcorn kernels inside.

### Storage

Check that the popcorn maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the power supply cord tightly around the popcorn maker; wrap it loosely to avoid causing damage.

### Specifications

Product code: EK2902

Input: 220–240 V ~ 50–60 Hz

Output: 1200 W

# RECIPES



## Blueberry Oat Popcorn Bars

50 g popcorn kernels  
50 g of coarsely chopped dry-roasted peanuts  
50 g dried blueberries  
50 g uncooked oats  
50 g marshmallows  
2 tbsp butter  
1 tbsp honey

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** Add peanuts, berries and oats to the popcorn and stir.

**STEP 3:** In a pan melt marshmallows butter and honey over a low heat.

**STEP 4:** Pour the marshmallow mixture over the popcorn and mix until all popcorn is covered.

**STEP 5:** Grease an 8–10 inch pan with butter and press the popcorn mixture into the pan.

**STEP 6:** Refrigerate until it has set for approx. 1 hour.

**STEP 7:** Cut the mixture into bars.

## Chocolate Chilli Popcorn

50 g popcorn kernels  
1 tbsp icing sugar  
1 tbsp cocoa powder  
½ tbsp milk powder  
Pinch of chilli powder (mild)  
Cooking oil spray

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** In a bowl combine icing sugar, milk powder, cocoa powder and chilli powder.

**STEP 3:** Lightly spray the popcorn with the cooking oil spray.

**STEP 4:** Sprinkle on the chocolate/chilli mix and stir well before serving.

## Marmite Popcorn

50 g popcorn kernels  
1 tbsp butter  
1 tbsp Marmite

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** Melt a tablespoon of butter in a pan on a low heat.

**STEP 3:** When butter is almost melted add a tsp of marmite.

**STEP 4:** After mixing well, pour the mixture over the popcorn and serve immediately.

## Yoghurt Popcorn

500 g plain yoghurt (preferably Greek-style)  
50 g popcorn kernels  
2 tbsp honey  
Handful of dried fruit (seeds and nuts optional)

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** In a bowl combine yoghurt, honey, dried fruit and popcorn.

**STEP 3:** Pour over popcorn before serving in individual bowls – ideal for breakfast.

## Parmesan Popcorn

50 g popcorn kernels  
2 tbsp grated parmesan cheese  
1 tbsp Italian herb seasoning  
Cooking oil spray

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** Place grated parmesan cheese in a bowl and mix in Italian herb seasoning.

**STEP 3:** Spray the popcorn lightly with cooking oil spray.

**STEP 4:** Mix with the parmesan and seasoning to coat evenly, and serve immediately.

## Apple and Cinnamon Popcorn

50 g popcorn kernels  
2 tbsp brown sugar  
2 tbsp chopped dried apples  
2 tbsp pecan halves (roughly chopped)  
2 tbsp butter  
1 tbsp cinnamon powder  
¼ tbsp nutmeg  
¼ tbsp vanilla extract

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** In a pan melt the butter on a low heat.

**STEP 3:** Add cinnamon, brown sugar, nutmeg and vanilla to melted butter and stir for one minute.

**STEP 4:** Add chopped dried apples and chopped pecan halves.

**STEP 5:** Add popcorn to the pan stir well and stir immediately.

## Toasted Berry Popcorn

400 g barley flakes  
85 g honey  
65 g dried blueberries  
50 g popcorn kernels  
45 g dried cranberries  
30 g oat bran  
3 tbsp light olive oil  
2 tsp vanilla  
1 tsp ground cinnamon  
1 tsp ground ginger or cardamom  
¼ tsp salt

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** Preheat oven to 250 °F.

**STEP 3:** Line a baking tray with foil.

**STEP 4:** Mix popcorn, barley flakes, oat bran in a large bowl.

**STEP 5:** Mix honey, oil, spices, vanilla, and salt in a measuring cup and blend well.

**STEP 6:** Pour over popcorn mixture.

**STEP 7:** Pour mixture onto baking tray.

**STEP 8:** Bake about 40 minutes or until crisp, stirring occasionally.

**STEP 9:** Stir in blueberries and cranberries and allow to cool before serving.

## Pumpkin Spice popcorn

50 g popcorn kernels

2 tbsp sugar

1 tbsp pumpkin pie spice

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** Sprinkle the pumpkin spice mixture over hot popcorn and shake up to distribute evenly.

## Natural Nutty Popcorn

50 g popcorn kernels

1 tbsp sunflower seeds

1 tbsp almonds, finely ground

1 tbsp walnuts or hazelnuts, finely ground

1 tbsp butter

Pinch of salt

### Method

**STEP 1:** Pop the popcorn as per the instructions in the section entitled 'Using the popcorn maker', and place the popcorn into a bowl.

**STEP 2:** Finely grind sunflower seeds and nuts in a food processor or blender.

**STEP 3:** Melt the butter in a pan.

**STEP 4:** Pour the melted butter over popcorn and add salt.

**STEP 5:** Sprinkle ground nuts over popcorn, toss to mix and coat evenly.



#### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Limited.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

CD160218/MD140723/V6