



# Russell Hobbs



## 40 LITRE RECTANGLE SENSOR BIN

### INSTRUCTION MANUAL

Please retain instructions for future reference.

### SAFETY INSTRUCTIONS

When using electrical products, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use these units, only if they have been given supervision or instruction concerning use of the units in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should attempt repairs. Improper repairs may place the user at risk of harm. Keep the product out of the reach of children.

Avoid liquid spills onto the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not use the product for anything other than its intended use.

Do not use the product outdoors or on wet surfaces.

Do not store the product in direct sunlight or in high humidity conditions.

This product is intended for domestic use only. It should not be used for commercial purposes.

### BATTERY SAFETY

Do not short-circuit a cell or battery.

Do not store cells and batteries haphazardly in a box or drawer where they may short-circuit each other or be short circuited by other metal objects.

Check that the battery compartment is secure.

Only batteries of the same or equivalent type as those recommended should be used with this product.





Batteries are to be inserted with the correct polarity.

Replace a full set of batteries at any one time.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

Exhausted batteries should be removed from the product to avoid leakage.

In the event of batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Seek medical advice immediately if a cell or battery has been swallowed.

Non-rechargeable batteries should not be recharged.

Rechargeable batteries must be removed from the product before being charged.

Rechargeable batteries should only be recharged under adult supervision.

When possible, remove the battery from the product when not in use.

Exhausted batteries must be removed and disposed of safely.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Do not expose batteries to heat or fire as they may explode.

Do not mix alkaline, standard (carbon zinc) and rechargeable batteries (nickel hydride).

Do not subject the batteries to mechanical shock.

Do not dispose of batteries in household waste.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.

This product requires 4 x 1.5 V AA batteries (not included).

 
## **CARE AND MAINTENANCE**

Wipe the inner and outer surfaces of the sensor bin with a soft, damp cloth and a mild detergent.

Clean the sensor bin immediately in the case of spillage.



## DESCRIPTION OF PARTS

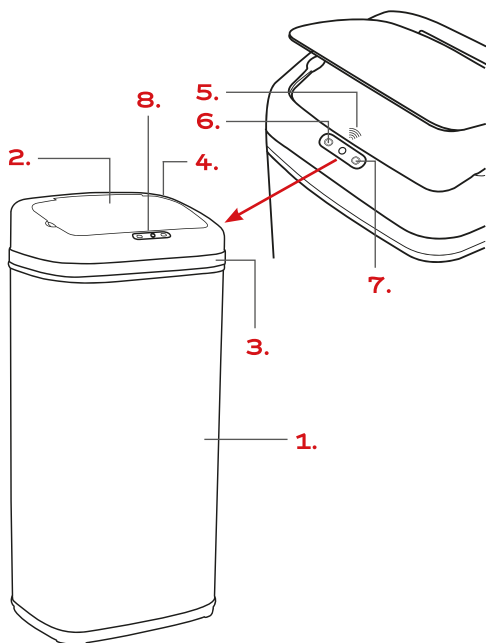

- |                         |                    |
|-------------------------|--------------------|
| 1. Sensor Bin main unit | 5. Open sensor     |
| 2. Bin lid              | 6. Open button     |
| 3. Liner-retaining ring | 7. Close button    |
| 4. On/off switch        | 8. Indicator panel |

## INSTRUCTIONS FOR USE

### BATTERY INSTALLATION

The sensor bin can be operated using 4 x 1.5 V AA batteries (not included).

**STEP 1:** Check that the sensor bin is turned off.

 
**STEP 2:** Open the battery cover on the underside of the bin lid.

**STEP 3:** Insert 4 x 1.5 V AA batteries (not included) into the battery casing, observing the correct polarity markings.


**STEP 4:** Close the battery cover, making sure that it is secure before use.

## USING THE SENSOR BIN


**STEP 1:** Remove the liner-retaining ring from the main body of the sensor bin and then place a bin liner (not included) into the centre of the sensor bin, folding the top of the bin liner over the edges.

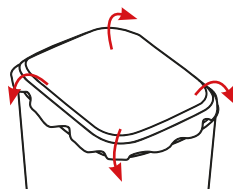

 **STEP 2:** Position the liner-retaining ring over the bin liner to secure it into position.

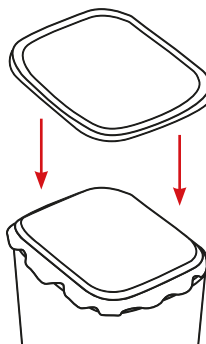

 **STEP 3:** If the bin liner needs replacing, remove the liner-retaining ring and then pull the bin liner out of the sensor bin. Replace the bin liner following steps 1-2.

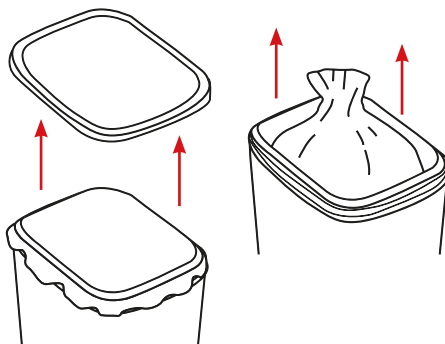





# Russell Hobbs

**STEP 4:** Turn on the sensor bin by flicking the on/off switch, located on the back of the bin lid, to the 'ON/I' position.

**STEP 5:** To open the bin lid, wave a hand approx. 15–25 cm above the sensor; the bin lid will automatically open. If there are no obstructions within the sensor area, the indicator panel will display a countdown; once the countdown reaches '0–', the bin lid will close.

Keep the bin lid open by leaving the hand within the sensor area.

**STEP 6:** Alternatively, press the open button to raise the bin lid; the bin lid will remain open until the close button is pressed.

**NOTE:** Do not dispose of rubbish directly into the sensor bin; use a bin liner. Do not overfill the bin liner, as this could cause it to break.

**WARNING:** Do not put fingers or hands into the sensor bin whilst the bin lid is opening and closing.

## DISPOSAL OF WASTE BATTERIES AND ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

*\*Diagrams are for illustrative purposes only - actual bin may vary from that shown.*

## SPECIFICATIONS

Product code: RH002732

Battery type: 4 x 1.5 V AA (not included)

To be eligible for the extended guarantee, please retain your proof of purchase. For any further queries, please contact us at [russellhobbshomewares@upplc.com](mailto:russellhobbshomewares@upplc.com).

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

CD200218/MD220922/V5

