

user manual

stainless steel

20 cm casserole



Please retain instructions for future reference.

IMPORTANT!

Lids and handles may become hot during cooking.
Always use heat-resistant oven gloves to move or handle the cookware.

Before first use

Hand-wash thoroughly.

Using the cookware

Suitable for use on hobs only, including induction.
The cookware (without pan lid) is also suitable for domestic oven use up to 200 °C/Gas Mark 6.
The pan lid is not suitable for oven use and must be removed.
For optimum energy efficiency, place the cookware on hob rings equivalent to the base size.
Do not let flames overlap the sides or handles.
To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils.
Do not use metal utensils.
Do not overheat the cookware or allow to boil dry.
Never leave unattended whilst in use.
The non-stick coating is prone to discolouration. This has no effect on the functionality of the cookware.
To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface.
Screws may loosen over time; using a screwdriver, carefully retighten them.

Cleaning and storing the cookware

Always allow to cool before cleaning.
This cookware is not dishwasher safe.
Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly.
Do not store wet cookware.

Caution

Never expose hot cookware to cold liquid. If there is any evidence of damage to the cookware, dispose of it carefully.



Manufactured by:
Ultimate Products UK Ltd., Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd., 19 Baggot Street Lower, Dublin DO2 X658. **ROI.**
under licence from Spectrum Brands (UK) Limited.
Russell Hobbs is the registered trademark of Spectrum Brands (UK) Limited.

MADE IN CHINA.

 www.russellhobbs.com

CD051023/MD311023/V1