

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

UK CE

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**
MADE IN CHINA.

CD260324/MD000000/V1

Sweet recipe suggestions

Fillings

- Vanilla ice cream
- Double chocolate ice cream
- Matcha ice cream
- Freshly whipped cream
- Frozen yoghurt
- Strawberry sorbet

Toppings

- Strawberries
- Raspberries
- Blueberries
- Banana
- Mango
- Pecans
- Chopped hazelnuts
- Coconut
- Almonds
- Toffee popcorn
- Sweet popcorn
- Salted popcorn
- Fudge chunks
- Cookie dough
- Chocolate straws
- Strawberry laces
- Gummy bears
- Biscuit
- Chocolate sprinkles
- Rainbow sprinkles
- Yoghurt chips
- Granola
- Chocolate brownie chunks
- Mini marshmallows
- Icing sugar

Sauce

- Salted caramel
- Chocolate hazelnut spread
- Golden syrup
- Butterscotch
- Honey
- Raspberry coulis


Savoury recipe suggestions

Fillings

- Avocado and scrambled egg
- Smoked BBQ pulled pork
- Smoked salmon and cream cheese
- Cheese and ham
- Full English breakfast (egg, sausage, bacon, beans and hash brown)

User manual

Waffle maker

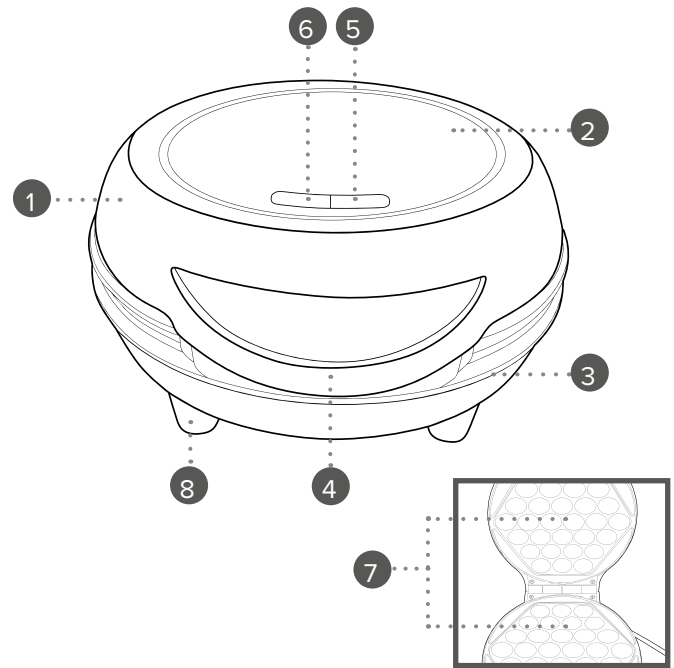

- 1. Waffle maker main unit
- 2. Upper housing
- 3. Lower housing
- 4. Handle
- 5. Green indicator light
- 6. Red indicator light
- 7. Non-stick cooking plates
- 8. Non-slip feet



To register for your extended guarantee, scan the QR code or visit [guippl.com/giles-and-posner](http://www.guippl.com/giles-and-posner) and register your product within 30 days of purchase. For any further queries, visit www.uppl.com/giles-posner.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.
©Giles & Posner trademark. All rights reserved.
CD040225/MD000000/V1



